MCSD Copier

Important buttons

- Click the **HOME** button to go to the main screen.
- Click the **YELLOW** button to clear settings.

